ULTRADESK VORTEX

Assembly Instructions

· SCREW ACCESSORIES

S1	S2	S3	S4	S5	S6
6mm x1	M8*16 x18	M8*25 x8	x4	M4*14 x28	x9

· PARTS ACCESSORIES

A	B	C	D	E	F
x2	x2	x1	x1	x2	x1

G	H	I	J	K	L
x1	x1	x2	x1	x1	x1

M.	N	O	P	Q
x2	x1	x1	x4	x1

1

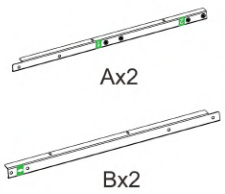

S1 6mm x1 | S2 M8*16 x4

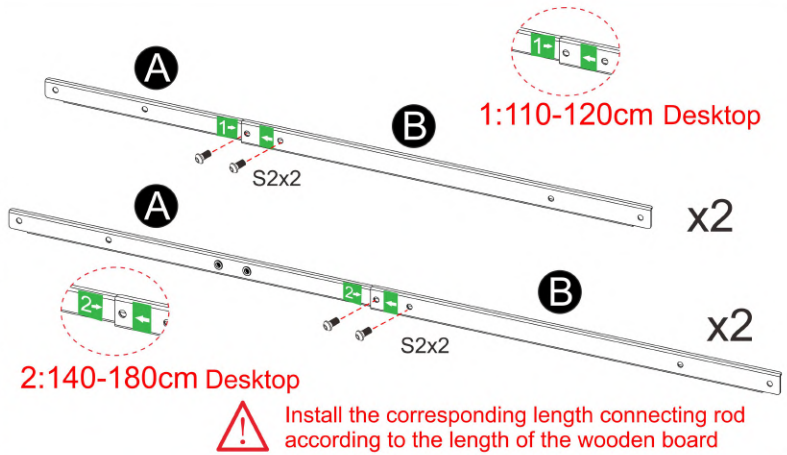

1:110-120cm Desktop

2:140-180cm Desktop

Install the corresponding length connecting rod according to the length of the wooden board

2

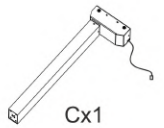

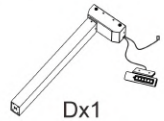

S1 6mm x1 | S3 M8*25 x8

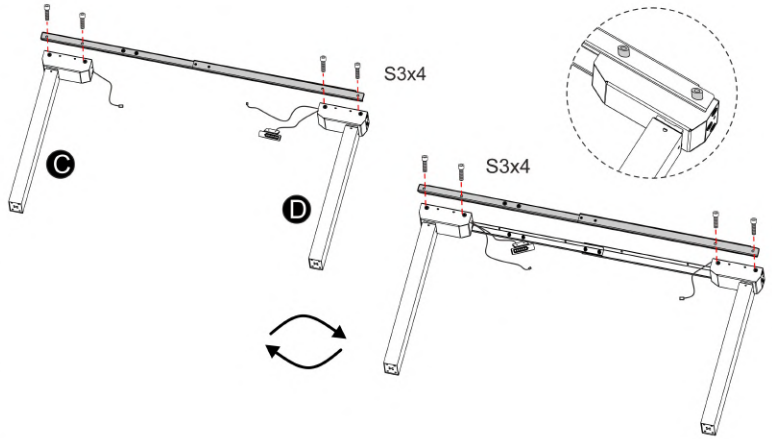

3



S1 6mm x1 | S2 M8*16 x8 | S4 x4

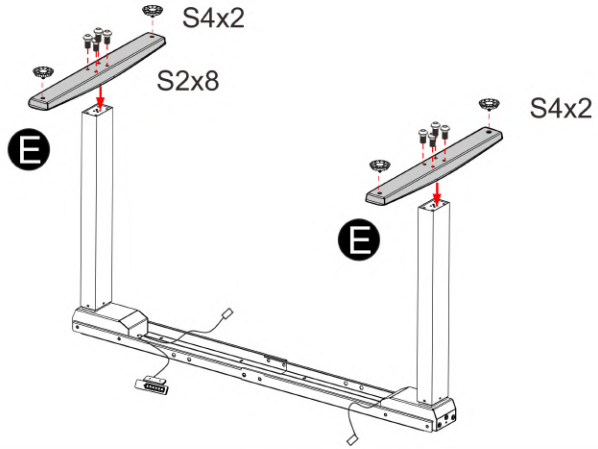

4







S1 6mm x1 | S2 M8*16 x6

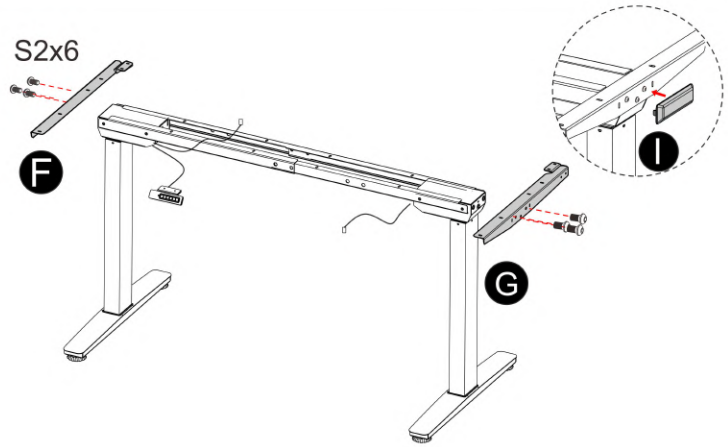

5

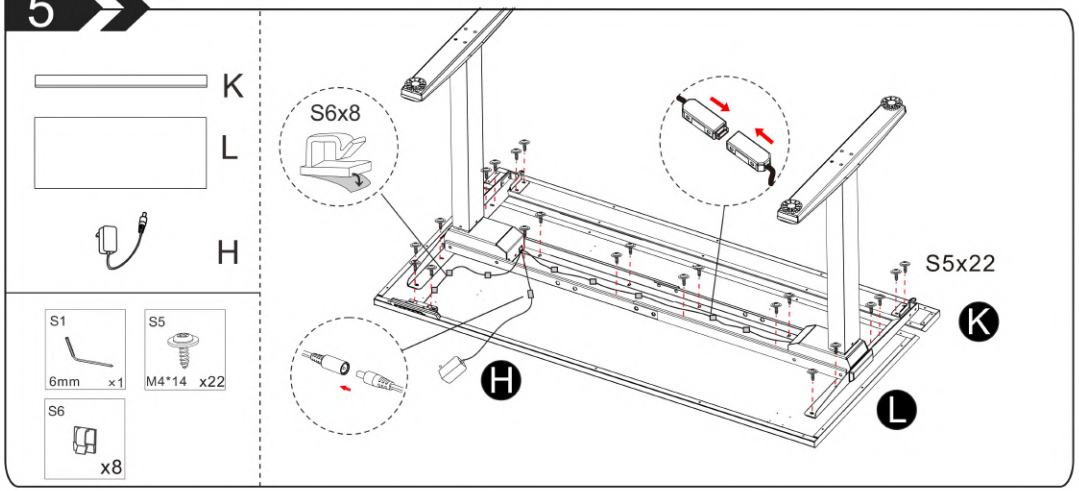

6

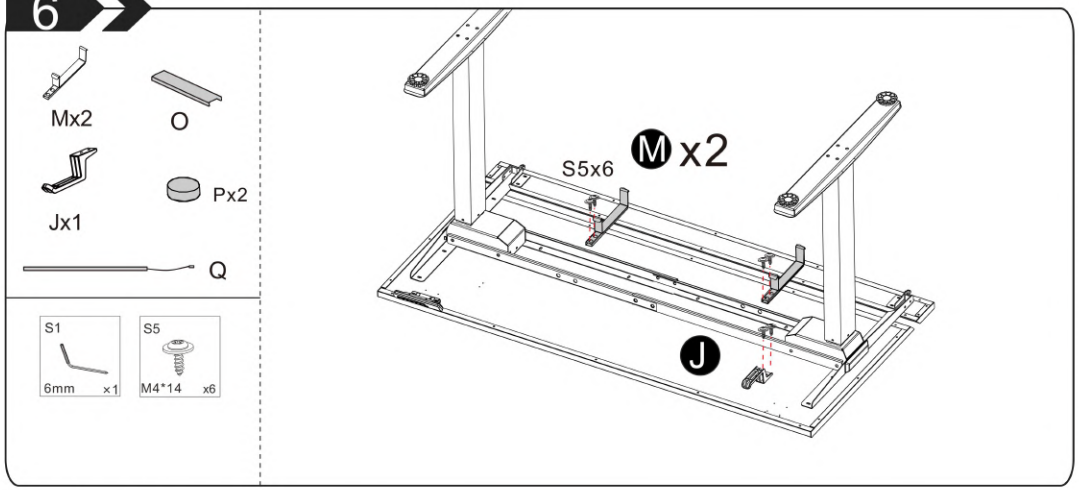

7

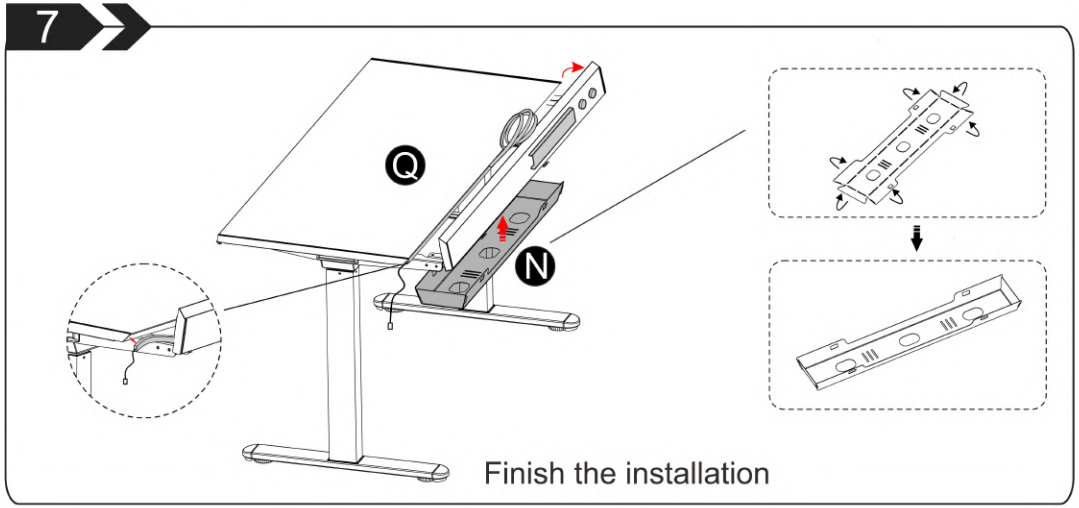

Instruction Manual

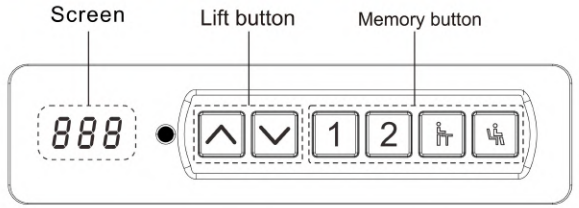

888 Screen | Up: Up button | 1 The lowest button | 80cm button

RST:Reset button | Down: Down button | 2 The highest button | 100cm button

Up and down botton operation

Press the " ^ " button to raise the table. Long press the " ^ " button for 3 seconds, then release the button to automatically raise it to the highest level.

Press the " v " button to lower the table. After holding the " v " button for 3 seconds, release the button and it will automatically rise to the lowest height.

Memory function operation

The " 1 " button is set to "maximum height" by default.
Custom Setting: Lift the table to the desired position. Long press for 3 seconds, the screen flashes, and the setting is successful.

The " 2 "button is set to 'minimum height' by default.
Custom Setting: Lift the table to the desired position. Long press for 3 seconds, the screen will flash, indicating successful setting.

The " h " button is set to "80cm height by default,
Custom Setting: Lift the table to the desired position. Long press for 3 seconds, the screen will flash, indicating successful setting.

The " h " button is set to "100cm height by default,
Custom Setting: Lift the table to the desired position. Long press for 3 seconds, the screen will flash, indicating successful setting.

Child lock function

Press ^ + v button for 5s at the same time, the screen displays LOC, and the child lock is completed. Press 5S at the same time, and the child lock ends

Reset Operation:

Hold down the "RST" key for 5 seconds, then release the button to enter the reset mode.
The reset is complete.